

# Hostess

## Rechargeable Wine Preserver

Model: WP00RA

 
 
### INSTRUCTION MANUAL

#### IMPORTANT SAFETY INSTRUCTIONS


Please read these instructions thoroughly before using the product.

1. This Wine Preserver is intended for household use only.
2. Do not operate the Wine Preserver with a damaged AC/DC Adapter or Charging Base. If the AC/DC Adapter is damaged it must be replaced by the manufacturer or a suitably qualified person.
3. Do not place the appliance near an open flame, cooking or heating appliance, or hot surface.
4. This appliance is not intended for use in wet or damp conditions.
5. Ensure that the power cord is positioned so that it will not get damaged or cause a trip hazard.
6. Use only the AC/DC Adapter supplied with the appliance.
7. Do not immerse the appliance in water or any other liquid.
8. The Wine Preserver must only be used with the Wine Stoppers provided.
9. This appliance is intended to remove the air from part filled wine bottles only.
10. This appliance contains a re-chargeable battery. Do not dispose of the product on a fire as this may cause an explosion.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. To avoid electric shock do not open the casing. There are no user serviceable parts inside.

#### FEATURES

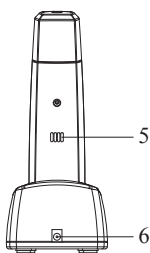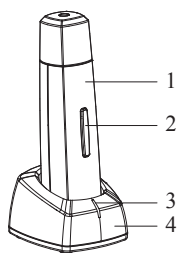

 1. Vacuum Pump Unit
2. Power Button (Illuminates blue)
3. Charging Indicator
4. Charging Base
5. Air Outlet
6. DC Power Socket
7. Date Dial
8. Wine Stopper
9. AC/DC Adapter (230V~ / 6Vdc 200mA)



#### CARE & MAINTENANCE

Wipe the Vacuum Pump Unit and Charging Base with a soft, dry cloth.

Clean the Wine Stopper with a damp, clean cloth.

Do not immerse any part of your Wine Preserver in water.

To maintain the life of the battery, it is recommended that the Unit is run until the battery is flat and then fully re-charged.

# OPERATION

## 1. Charging the Vacuum Pump Unit

It is recommended that the Vacuum Pump Unit is charged for at least 12 hours before using the Wine Preserver for the first time. Please follow the instructions for charging the unit below:

- Connect the DC Power Plug into the DC Power Socket at the back of the Charging Base.
- Place the Vacuum Pump Unit into the Charging Base. The Power Switch must be aligned with the Charging Indicator, to ensure that the connections are made.
- Insert the AC/DC Adapter into a mains socket and switch on the supply.
- The Charging Indicator will flash red, indicating that the battery is charging. It will take 8 -12 hours to fully charge the battery.
- When the battery in the Vacuum Pump Unit is fully charged the Charging Indicator will turn green.
- Switch off the supply and remove the AC/DC Adapter from the mains socket. Remove the DC Power Plug from the Charging Base.

The Vacuum Pump Unit needs to be re-charged when the pump sounds to be running very slow or when the Power Button does not illuminate blue when pressed.

## 2. Sealing the Wine Bottle

To vacuum-seal a partially empty bottle of wine:

- Set the Date Dial on the Wine Stopper to indicate the date when the wine bottle was vacuumed.
- Insert the Wine Stopper into the mouth of the wine bottle.
- Place the Vacuum Pump Unit onto the Wine Stopper. Ensure that the Unit is vertical so that it can seal properly.
- Secure the wine bottle and gently push the Vacuum Pump Unit down onto the Wine Stopper.
- Press and hold the Power Button. The button will illuminate blue whilst the pump is operating.
- The Unit will automatically stop when the vacuum process is complete.
- Remove the Vacuum Pump Unit from the Wine Stopper.

The number of days that the wine can be preserved will depend on the storage conditions of the bottle. It is recommended that the vacuum process is repeated after a few days, to ensure that the vacuum is maintained.

## ENVIRONMENTAL NOTE



This symbol on the product indicates that it must not be discarded as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal

If you encounter any problems with your Hostess Wine Preserver, please contact the appropriate Service Department. If the Wine Preserver was bought in the UK, please contact:

Hostess Customer Service Department,  
Crosslee plc,  
Halifax, West Yorkshire,  
United Kingdom HX3 8DE  
Telephone: 01422 203963

If the Wine Preserver was bought outside the UK, please contact your retailer.